INSTALLATION GUIDE

PERFORATED REAR WINDOW DECALS / One Way Vision 50/50 film, applied to the outside of the glass with the printed side out. Read both sides before you start.

DRY APPLICATION
No water or application fluid. The glass, its edges and the adhesive must be dry.

15–30°C / 59–86°F
Work in the shade, out of the wind. Avoid hot or cold glass.

> **REMOVE WATER-REPELLENT AND CERAMIC COATINGS**
> Film may not bond to treated glass. A sliding or divided window? Apply each pane separately — never bridge a joint, seal or opening with one piece.


HAVE THESE READY

Felt-edge squeegee · Ammonia-free glass cleaner · Lint-free cloths · Low-tack masking tape · Scissors · Trimming tool for oversized film



01 CLEAN & DRY THE GLASS

Wash the outside of the window with an ammonia-free cleaner that leaves no residue. Dry with a fresh lint-free cloth right up to the seals, and let the edges dry completely.

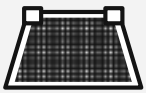

PRINTED SIDE OUT

02 POSITION THE GRAPHIC

Keep the backing on. Hold the graphic on the outside of the glass, printed side out, check that it is level and tape the top corners. Keep the third brake light and any required clear areas uncovered.



CENTER HINGE

03 MAKE A CENTER HINGE

Run a vertical strip of masking tape down the middle, onto the body above and below the glass. Then remove the corner tape from the half you will apply first.

APPLY & FINISH



04 PEEL BACK THE FIRST HALF

Fold that half back over the hinge and peel its backing to the hinge. Cut the loose backing off with scissors — the paper only, away from the glass, paint and seals. The film is not laminated: the backing is the only layer you remove.




05 APPLY THE FIRST HALF

Hold the film just off the glass without stretching it. With the felt-edge squeegee, start at the hinge and work outward in firm, overlapping strokes.



06 APPLY THE SECOND HALF

Remove the hinge and the remaining tape. Peel the backing a little at a time and squeegee from the center to the other edge. Do not pull or stretch the film.

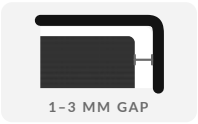

07 TRIM AROUND THE WINDOW

Oversized film only: trim it, leaving 1–3 mm (0.04–0.12 in) to the rubber seal, and keep the film on the glass. A blade can scratch glass and cut seals — if in doubt, let an installer do this step.



08 PRESS THE EDGES & INSPECT

Go over the whole graphic again with the felt edge, especially the edges and corners. Check the view from inside the car before you drive. A crease or a lifting edge? Send us a photo before you use heat or cut.

AFTER INSTALLATION

Keep the decal dry for the first 24 hours. Then wash as usual with mild soap, water and a soft cloth — no abrasive pads, solvents or ammonia cleaners. Keep a pressure washer at a distance and off the edges; brushes in automatic car washes can damage the film, just as they can damage paint. The rear wiper is fine to use. In rain or at night the view through perforated film is less clear.

NEED HELP?

Damaged or missing items, or something doesn't look right? Send us your order number and a photo before you cut or stretch the film.

supdec.graphics/info/contact
support@supdec.graphics

FAQ